


SmartDispenser®

DISPENSE TIP LOCATOR

Accurate Dispense Tip Location for Automated Dispensing

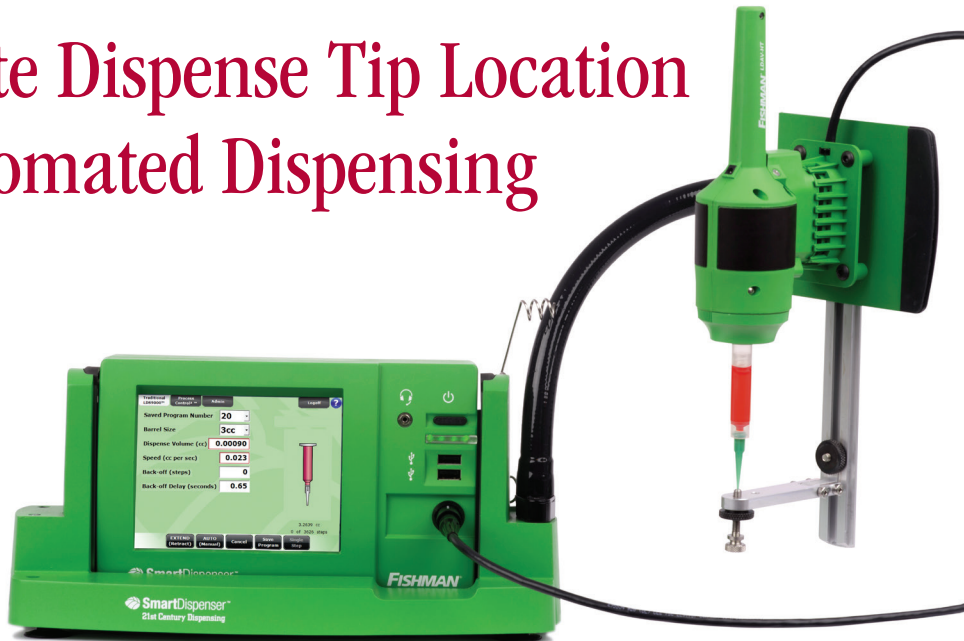

The dispense tip locator is part of the SmartDispenser® Priming Station. The dispense tip locator is attached to the back of the priming station gun stand. The locator provides a positive stop to assure the dispense tip is set at the proper height for fully automated assembly systems.

1. Simply attach a dispense gun with the proper dispense tip height. Engage the dispense tip locator arm into a locked position, use the thumb wheel to make micro height adjustments and then lock the setting in place.
2. To remove a dispense gun from the priming station the dispense locator arm easily disengages with a pulling – dropping motion so it rests in a hanging position. Once the new gun is installed for priming, attach a new dispense tip, engage the dispense tip locator arm into the locked position, adjust the tip so it touches the locating arm, disengage and the process is complete.

Re-order Information *Priming stations do not include a dispense gun.*

PART NUMBER		DESCRIPTION	MODEL	LENGTH
High Torque Gun	Low Torque Gun			
D65D941	DP4D941	Offline Gun Reload Station w/Gun Mount and Tip Locator	LDAV	30Ft
D66D941	DP5D941	Offline Gun Reload Station w/Gun Mount and Tip Locator	MDAV	30Ft
D67D941	DP6D941	Offline Gun Reload Station w/Gun Mount and Tip Locator	SDAV	30Ft
D68D941		Offline Gun Reload Station w/Gun Mount and Tip Locator	SSDAV	30Ft
DT10041		SmartDispenser® Dispense Tip Locator		